

# Clamco Bench Mounted Sealers

*For packaging food, coffee, retail & industrial products*

Choose the dependable Clamco Bench Mounted Constant Heat Sealer and select a jaw to match your packaging requirements. Available in 12" and 24" seal lengths with flat, serrated, or PTFE covered jaws. This Clamco sealer offers greater durability and operation equal to more expensive methods of sealing.


All models are equipped with a foot-pedal assembly, perfect for mounting to the optional stand. The Clamco manufactured stand is designed to complement the sealer; featuring tilt convenience, adjustable height, and a bag rest.

The Clamco Constant Heat Bench Mounted Sealers are made in the USA and include a 1-year limited warranty.




## Features

- Choice of jaws: 1" flat 1" flat PTFE covered  
1" serrated 1/4" flat PTFE covered
- Thermostat controls sealing temperature of upper & lower jaws for strong, hermetic seals
- All sealing jaw surfaces are heated evenly by durable heating cartridge, eliminating hot or cold spots
- Heat indicator assists in proper temperature selection
- All electrical components are easily replaced in minutes without special tools
- Red safety pilot light warns operator that jaws are hot while jaws are wrapped with seal guards for protection
- Electrical: 120V, 500W for 12" seal length and 800W for 24" seal length

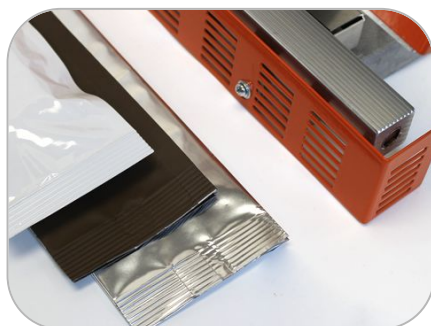

*Serrated jaw model makes a horizontal seal just right for cellophane and polycel bags*

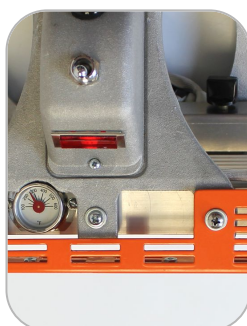

*Unit features heat indicator, thermostat control, pilot light, and On/Off switch*

## Models

**1" wide plain jaws**—for paper or foil bags with a poly liner

232B – 12" Seal Bar Length

234B – 24" Seal Bar Length

**1" wide plain jaws with PTFE cover**—for laminated bags with a poly liner

232BT – 12" Seal Bar Length

234BT – 24" Seal Bar Length

**1" wide serrated jaws**—for cellophane, thick, or gusseted bags

242B – 12" Seal Bar Length

244B – 24" Seal Bar Length

**1/4" wide plain jaws with PTFE cover**—for all polyethylene bags

252B – 12" Seal Bar Length

254B – 24" Seal Bar Length



*Also available—  
Model 825 Stand is  
height adjustable  
and features a  
large tilt tray*



a PAC Machinery company

**MADE IN  
USA**

[pacmachinery.com](http://pacmachinery.com)

## Adjustable Stand Model 825

*Designed for use with all Clamco Bench Mounted Sealers*


Complete your manual sealing operation by matching our Clamco Bench Mounted Sealer with a Clamco Adjustable Stand. The Clamco manufactured stand is designed to complement the sealer; with a large tray that tilts to a 20° angle. The Model 825 Stand comes with pre-drilled holes to securely mount your Clamco sealer and mount your sealer's foot pedal assembly into operating position. The stand features adjustable height in .75" increments, and multiple positions to mount the bag rest.

The stand is constructed of heavy duty powder coated steel to last through many years of production use.

The Clamco Adjustable Stand is made in the USA and includes a 1-year limited warranty.

### Stand Features

- Stand height adjusts easily from 31.25" to 39.5" high in .75" increments
- Heavy duty powder coated steel construction
- Adjustable levelers
- 24" x 11.75" large tray for Clamco Bench Mounted Sealers up to 24"
- Tray tilts 20° for sealing at an angle

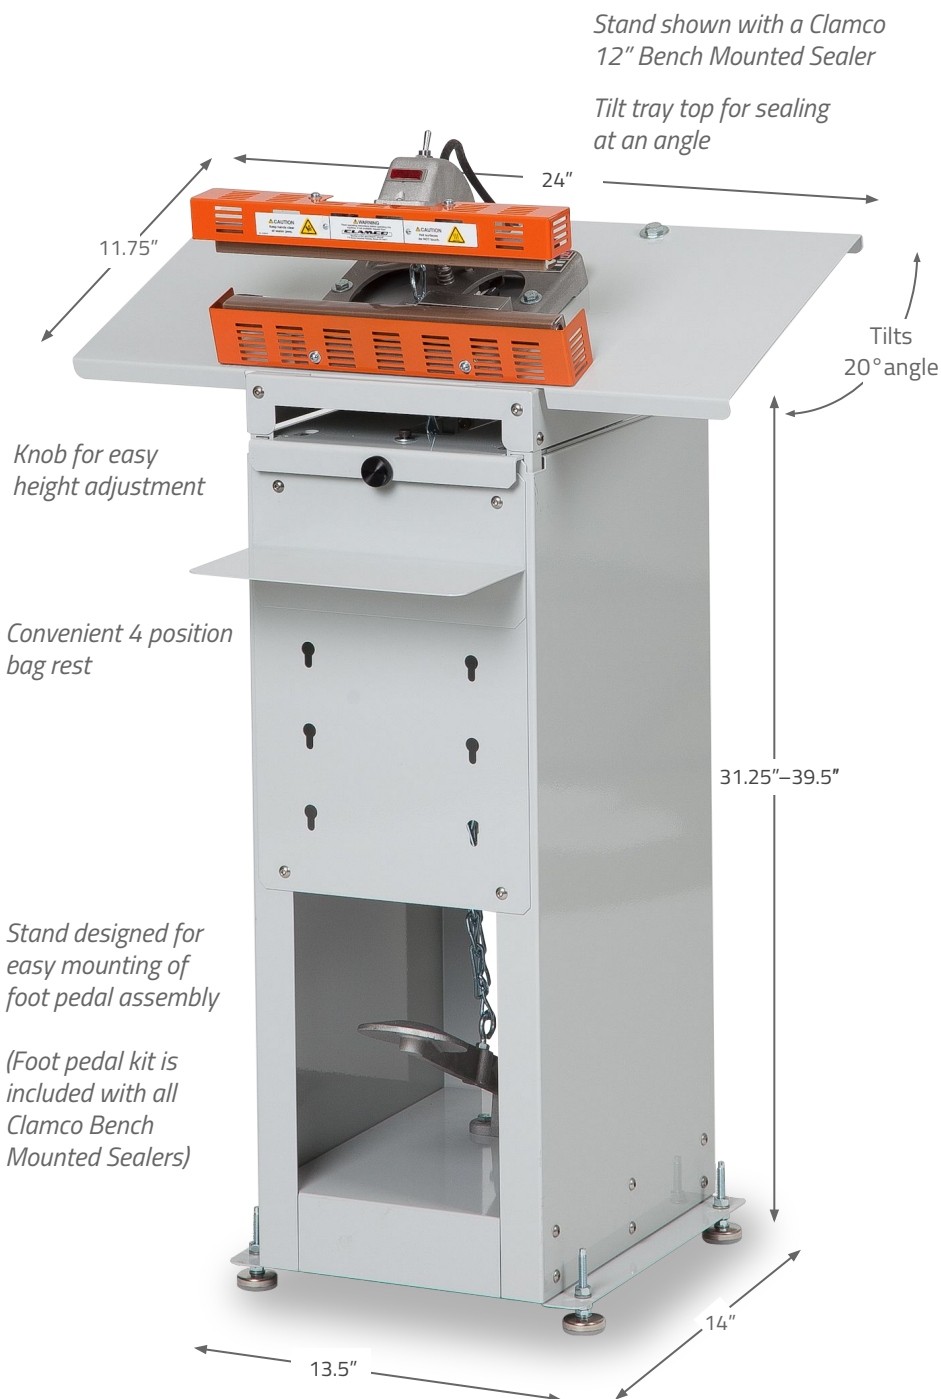

### Contact us today:

1 (234) 222-1000 ■ [sales@pacmachinery.com](mailto:sales@pacmachinery.com)



a PAC Machinery company

775 Berea Industrial Parkway, Berea OH 44017 ■ 1 (234) 222-1000 ■ [pacmachinery.com](http://pacmachinery.com)

Specifications subject to change without notice

**MADE IN  
USA**

[pacmachinery.com](http://pacmachinery.com)